


REFER TO HYDROTECH'S GUIDELINE ROOFING & WATERPROOFING DETAILS FOR SUGGESTED TERMINATIONS, FLASHING AND DETAILING SPECIFICS.

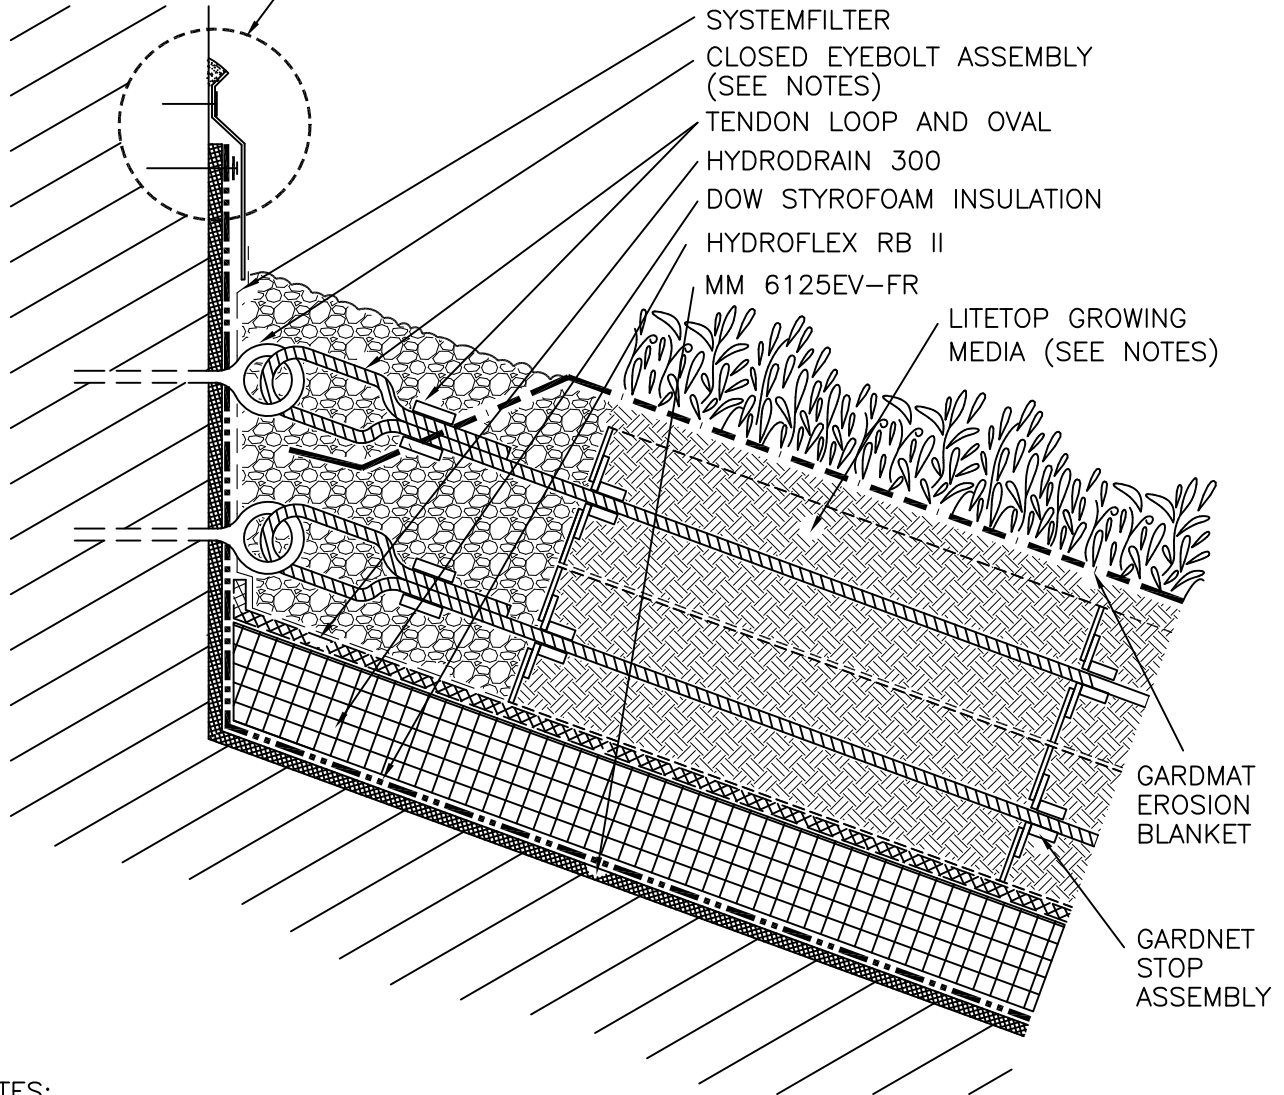

NOTES:

- EYEBOLT ASSEMBLY PULL OUT STRENGTH AND METHOD OF ATTACHMENT TO STRUCTURE MUST BE DETERMINED AND VERIFIED BY PROJECT ENGINEER.
- IF DOW STYROFOAM INSULATION IS NOT INSTALLED, HYDRODRAIN 302 SHALL BE PLACED ON TOP OF THE HYDROFLEX RB II.
- NUMBER OF STOPS AND NUMBER AND LENGTH OF REQUIRED TENDONS IS DETERMINED BY MEDIA DEPTH AND DEGREE & LENGTH OF SLOPE.
- LITETOP GROWING MEDIA IS REQUIRED FOR ALL GARDNET INSTALLATIONS. NO SUBSTITUTIONS ARE ALLOWED.
- UPPER LAYER OF GARDNET CELLS MUST BE OVERFILLED WITH LITETOP MEDIA BY 1/2"–1".
- GARDMAT EROSION MAT SHALL BE INSTALLED WHEN PLANTING PLUGS. NO GARDMAT IS REQUIRED WHEN INSTALLING INSTAGREEN SEDUM CARPET OR TILE.



**GARDEN
ROOF
ASSEMBLY**

AMERICAN HYDROTECH, INC.

TYPICAL TOP OF SLOPE DBL. LAYER
GARDNET WALL/CURB CONNECTION
(WITH DOW INSULATION)

NO SCALE

GN-5D